

**Lucid**  
**CCSI to NACS Adapter Guide**  
**North America**

**Version 2025.30.3 US English**

# Table of Contents

Chapters	Sections	
<b>Disclaimers</b>	Legal and Disclaimers	1
<b>Safety Information</b>	Important Safety Information	2
	Warnings	3
<b>Overview</b>	Adapter Overview	4
	Specifications and Compatibility	5
<b>Usage Guide</b>	Charging Time	6
	Connecting the Adapter	7
	Removing the Adapter	8
	Troubleshooting	9
<b>Consumer Information</b>	Warranty	10
	Customer Care	11

---

# Legal and Disclaimers

## Legal

Lucid, Lucid Gravity, Lucid CCS1 to NACS Adapter, and the Lucid Motors wordmarks and logos are trademarks of Lucid Group, Inc.

Specifications are subject to change without notice. Images of the Lucid CCS1 to NACS Adapter are representative; production models may vary.

No portion of these materials may be duplicated, used, or disclosed without prior written permission from Lucid Group, Inc.

## Disclaimers

Read this user guide before operating.

This user guide includes the latest information available at the time of publishing. Lucid Group, Inc. reserves the right to make changes to this user guide and/or product without notice.

Changes or modifications to this product not completed by an authorized service provider could void the product warranty.

---

# Important Safety Information

This document contains important instructions and warnings that must be followed when using your Lucid CCS1 to NACS Adapter.

Read and follow all instructions, warnings, dangers, and notifications before using the Lucid CCS1 to NACS Adapter. Failure to follow these guidelines may result in death, injury, or property damage and will void product warranty.

Save these instructions pertaining to a risk of fire or electric shock.

# Warnings

Please note this adapter is designed exclusively for DC charging and is **NOT** compatible with any AC chargers. Attempting to use it with an AC charger can result in a fire, resulting in personal injury and/or property damage.

1. Read this document before using the Lucid CCS1 to NACS Adapter. Failure to follow any of the instructions or warnings in this document can result in fire, electrocution, serious injury or death.
2. Regularly inspect both the adapter and charging/connector ports to identify any accumulated dirt or debris. When dirt or debris enters the connection ports, there is a risk of overheating which can be safeguarded by promptly removing dirt or debris using a compressed air dispenser and electric cleaner. **DO NOT** use the adapter if you observe any damage to the connector ports or pins.
3. This adapter is intended only to be used with Lucid vehicles. Do not use it for any other purpose.
4. Do not use the CCS1 to NACS adapter if it is defective, appears cracked, broken, damaged or fails to operate.
5. Do not open, disassemble, or modify the CCS1 to NACS adapter. Contact Lucid Customer Care for any repairs.
6. Do not disconnect the CCS1 to NACS adapter while the vehicle is charging.
7. Protect the CCS1 to NACS adapter from any water or moisture.
8. Handle with care whenever moving or transporting it. Store in a safe location.
9. Do not touch the CCS1 to NACS adapter's end terminals with sharp metallic objects, such as wire, tools or needles.
10. Do not damage the CCS1 to NACS adapter with sharp objects.
11. Do not insert foreign objects into any part of the CCS1 to NACS adapter.
12. Protect the CCS1 to NACS adapter from moisture, water, and foreign objects at all times. If any exist or appear to have corroded or damaged the adapter, do not use the adapter.
13. Only use in temperatures between -22 °F and 122 °F (-30°C and 50°C).
14. Do not clean with detergent or cleaning solvents.
15. Use of the CCS1 to NACS adapter may affect or impair the operation of medical or implantable electronic devices, such as an implantable cardiac pacemaker or an implantable cardioverter defibrillator. Before using the adapter, check with the electronic device manufacturer concerning the effects that charging may have on any such electronic device.
16. Ensure the charge cable and the CCS1 to NACS adapter do not obstruct pedestrians or other vehicles or objects.
17. To prevent damage to the CCS1 to NACS adapter, handle with care when using or transporting it. Do not subject it to strong force or impact and do not drag or step on it.

For all other questions or concerns about your Lucid CCS1 to NACS Adapter, please contact Lucid Customer Care.


---

# Adapter Overview

## Lucid CCS1 to NACS Adapter



### Parts of the Lucid CCS1 to NACS Adapter

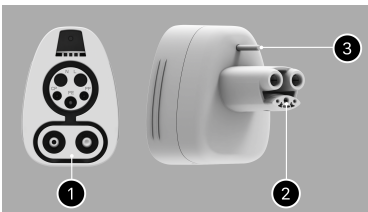


1. CCS1 Charge Port (Female)
2. NACS Charge Connector (Male)
3. Insert Stopper

# Specifications and Compatibility

## Specifications Reference

<b>Rated Voltage</b>	1000V DC
<b>Rated Current</b>	Up to 500 Amps
<b>Operating Temperature</b>	-22°F to +122°F (-30°C to +50°C)
<b>Storage Temperature</b>	-40°F to +185°F (-40°C to +85°C)
<b>IP Rating</b>	IP67 Unmated, IP54 Mated
<b>EV Connector</b>	CCS1 to NACS

 **WARNING:** Do not store the CCS1 to NACS adapter outside of the storage temperature range.

## Adapter Compatibility

The Lucid CCS1 to NACS Adapter is compatible with the following Lucid vehicles:

- Lucid Gravity

---

# Charging Time


Charging time may vary according to charging station power, ambient temperature, and battery temperature.

If the surface temperature of the adapter reaches 140°F (60°C), the charging will shut off.


## Connecting the Adapter

1. Open the charge port door on your Lucid vehicle.
2. Insert the CCS1 charging cable into the CCS1 port on the adapter and press firmly until you hear a click.
4. Begin charging according to the charging station's guidelines.


Check the charge port status lights or the Pilot Panel to ensure your Lucid vehicle is charging.

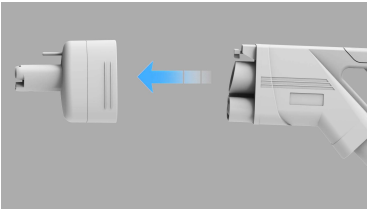


3. Insert the adapter into the Lucid charge port.

 **NOTE:** Make sure that the adapter and CCS1 charging cable are firmly connected and that the adapter is plugged into the Lucid charge port.

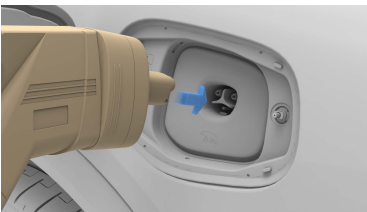

Wait for the vehicle's charge port light to signal that it has accepted the charger.




 **NOTE:** The insert stopper on the adapter will keep it from being inserted too far and damaging the vehicle's charge port.


---

# Removing the Adapter


-  **NOTE:** Only remove the adapter from the charge port once charging is completed.
-  **NOTE:** Ensure your Lucid vehicle is **unlocked** prior to removing the adapter.

1. Hold both the charger handle and the adapter and securely pull them out of the Lucid vehicle's charge port.

-  **NOTE:** Do not press the unlock button on the handle while pulling it out of the charge port.

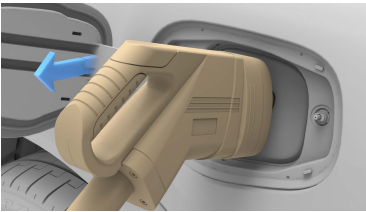

2. Press the unlock button on the handle and safely remove the adapter.

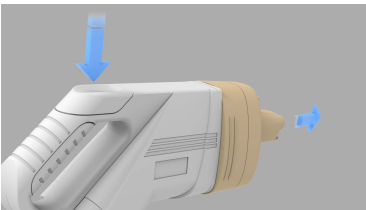

---

# Troubleshooting

**If you find that your car isn't charging while using the adapter, please follow these steps:**

1. Check to make sure the adapter and the CCS1 charging cable are firmly connected and that the adapter is plugged into the Lucid charge port.
2. Try unplugging and re-inserting both the charging cable and the adapter.
3. Check the charging status on both the CCS1 charger and your Lucid vehicle's Pilot Panel.
4. If the problem persists after attempting the above steps, please contact Lucid Customer Care.

---

# Warranty

Lucid's Genuine Spare Parts and Accessories Limited Warranty terms can be found here: <https://lucidmotors.com/legal#warranty>


To obtain a copy of the Lucid Genuine Spare Parts and Accessories Limited Warranty by mail (US only), send a written request to:

**Attn:** Warranty Services

7373 Gateway Blvd

Newark, CA 94560

USA

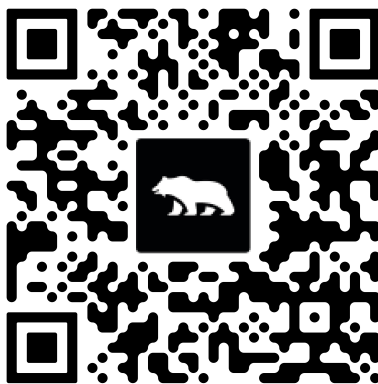

## Customer Care

Questions or feedback about the Lucid CCS1 to NACS Adapter? Contact Lucid Customer Care:

Lucid Motors

7373 Gateway Blvd

Newark, CA 94560

USA

**Phone:** 1-888-99-LUCID  
(1-888-995-8243)

**E-mail:** [customercare@lucidmotors.com](mailto:customercare@lucidmotors.com)

**Website:** [www.lucidmotors.com](http://www.lucidmotors.com)

P21-Y23100-00  
Ver. 2025.30.3 - en-US

**Lucid**  
**Guide de adaptateur**  
**CCSI vers NACS**  
**Amérique du Nord**

Version 2025.30.3 Canadian French

# Table des matières

Chapitres	Sections	
<b>Avis de non-responsabilité</b>	Services juridiques et avis de non-responsabilité	1
<b>Renseignements sur la sécurité</b>	Renseignements importants sur la sécurité	2
	Avertissements	3
<b>Vue d'ensemble</b>	Aperçu de l'adaptateur	5
	Spécifications et compatibilité	6
<b>Guide d'utilisation</b>	Temps de recharge	7
	Branchement de l'adaptateur	8
	Retrait de l'adaptateur	9
	Dépannage	10
<b>Renseignements à l'intention du consommateur</b>	Garantie	11
	Assistance à la clientèle	12

# Services juridiques et avis de non-responsabilité

## **Juridique**

Lucid, Lucid Gravity, l'adaptateur CCS1 vers NACS de Lucid, ainsi que les mots-clés et les logos Lucid Motors sont des marques de commerce du Groupe Lucid inc.

Les spécifications peuvent être modifiées sans préavis. Les images de l'adaptateur CCS1 vers NACS de Lucid sont représentatives; les modèles de production peuvent varier.

Aucune partie de ces documents ne peut être reproduite, utilisée ou divulguée sans l'autorisation écrite préalable de Lucid Group, Inc.

## **Avis de non-responsabilité**

Veuillez lire ce guide de l'utilisateur avant l'utilisation.

Ce guide de l'utilisateur comprend les plus récentes informations disponibles au moment de la publication. Lucid Group, Inc. se réserve le droit d'apporter des modifications à ce guide d'utilisation ou à ce produit sans préavis.

Toute modification à ce produit qui n'a pas été effectuée par un fournisseur de services autorisé pourrait annuler la garantie du produit.

---

# Renseignements importants sur la sécurité

Ce document contient des instructions et des avertissements importants à suivre lors de l'utilisation de votre adaptateur Lucid CCS1 vers NACS.

Lisez et suivez toutes les instructions, avertissements, dangers et notifications avant d'utiliser l'adaptateur Lucid CCS1 vers NACS. Le non-respect de ces directives peut entraîner la mort, des blessures ou des dommages matériels et annulera la garantie du produit.

Conservez ces instructions définissant le risque d'incendie ou de décharge électrique.

# Avertissements

Veillez noter que cet adaptateur est conçu exclusivement pour la recharge c.c. et n'est **PAS** compatible avec les chargeurs c.a. L'utilisation d'un chargeur c.a. peut provoquer un incendie et causer des blessures corporelles ou des dommages matériels.

1. Lisez ce document avant d'utiliser l'adaptateur Lucid CCS1 vers NACS. Le non-respect de directives ou des avertissements de ce document peut entraîner un incendie, une décharge électrique, des blessures graves ou la mort.
2. Inspectez régulièrement l'adaptateur ainsi que les ports de recharge ou de connexion afin de détecter toute accumulation de saleté ou de débris. Lorsque de la saleté ou des débris pénètrent dans les ports de connexion, il existe un risque de surchauffe. Ce risque peut être évité en retirant rapidement la saleté ou les débris à l'aide d'un distributeur d'air comprimé et d'un nettoyeur électrique. N'utilisez **PAS** l'adaptateur si vous constatez des dommages aux ports de connexion ou aux contacts.
3. Cet adaptateur est conçu uniquement pour les véhicules Lucid. Ne l'utilisez pas à d'autres fins.
4. N'utilisez pas l'adaptateur CCS1 vers NACS s'il est défectueux, fissuré, cassé, endommagé ou s'il ne fonctionne pas correctement.
5. Ne pas ouvrir, démonter ou modifier l'adaptateur CCS1 vers NACS. Contactez le service à la clientèle de Lucid pour toute réparation.
6. Ne pas débrancher l'adaptateur CCS1 vers NACS pendant que le véhicule est en charge.
7. Protégez l'adaptateur CCS1 vers NACS de toute eau ou humidité.
8. Manipulez-le avec soin lors de tout déplacement ou transport. Rangez-le dans un endroit sûr.
9. Ne pas toucher les bornes de l'adaptateur CCS1 vers NACS avec des objets métalliques tranchants, tels que des fils, outils ou aiguilles.
10. Ne pas endommager l'adaptateur CCS1 vers NACS avec des objets pointus.
11. Ne pas insérer de corps étrangers dans une partie de l'adaptateur CCS1 vers NACS.
12. Protégez l'adaptateur CCS1 vers NACS contre l'humidité, l'eau et les corps étrangers en tout temps. Si l'adaptateur existe ou semble corrodé ou endommagé, n'utilisez pas l'adaptateur.
13. Utiliser uniquement à des températures entre -22 °F et 122 °F (-30 °C et 50 °C).
14. Ne pas nettoyer avec du détergent ou des solvants de nettoyage.
15. L'utilisation de l'adaptateur CCS1 à NACS peut nuire au fonctionnement d'appareils électroniques médicaux ou implantables, comme les stimulateurs cardiaques implantables ou les défibrillateurs automatiques implantables. Avant d'utiliser l'adaptateur, vérifiez auprès du fabricant de l'appareil électronique les effets que la recharge peut avoir sur un tel appareil électronique.
16. Assurez-vous que le câble de recharge et l'adaptateur CCS1 vers NACS n'obstruent pas les piétons, les véhicules ou les objets.

- 
17. Pour éviter d'endommager l'adaptateur CCS1 vers NACS, manipulez-le avec soin lors de son utilisation ou de son transport. Ne le soumettez pas à des forces importantes ou à des chocs, et ne le traînez pas ni ne marchez dessus.


Pour toute autre question ou préoccupation concernant votre adaptateur Lucid CCS1 vers NACS, veuillez contacter le service clientèle de Lucid.

# Aperçu de l'adaptateur

## Adaptateur Lucid CCS1 vers NACS



## Pièces de l'adaptateur Lucid CCS1 vers NACS

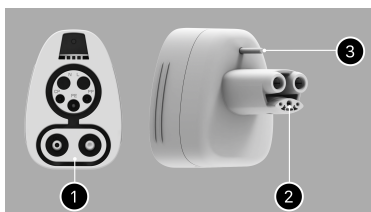


1. Port de recharge CCS1 (femelle)
2. Connecteur de recharge NACS (mâle)
3. Insérer le butoir

---

# Spécifications et compatibilité

## Spécifications

<b>Tension nominale</b>	1 000 V C.C.
<b>Courant nominal</b>	Jusqu'à 500 A.
<b>Température de fonctionnement</b>	-30 °C à 50 °C (-22 °F à 122 °F)
<b>Température d'entreposage</b>	-40 °C à 85 °C (-40 °F à 185 °F)
<b>Cote IP</b>	IP67 non connecté, IP54 connecté
<b>Connecteur de véhicule électrique</b>	CCS1 à NACS

 **ATTENTION** : Ne rangez pas l'adaptateur CCS1 vers NACS à l'extérieur de la plage de température de stockage.

## Compatibilité de l'adaptateur

L'adaptateur CCS1 vers NACS de Lucid est compatible avec les véhicules Lucid suivants :

- Lucid Gravity

---

# Temps de recharge


Le temps de recharge peut varier en fonction de l'alimentation de la station de recharge, de la température ambiante et de la température de la batterie.

Si la température de surface de l'adaptateur atteint 60 °C (140 °F), la recharge s'arrête.

---

# Branchement de l'adaptateur

1. Ouvrez le volet du port de recharge de votre Lucid.
2. Insérez le câble de recharge CCS1 dans le port CCS1 de l'adaptateur et appuyez fermement jusqu'à ce que vous entendiez un clic.

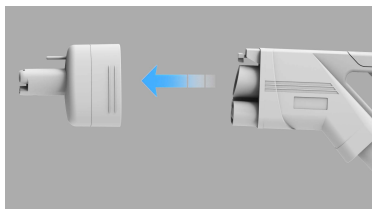


4. Commencez la recharge conformément aux directives de la station de recharge.


Vérifiez les voyants d'état des ports de recharge ou le panneau pilote pour vous assurer que le véhicule Lucid est se recharge.




3. Insérez l'adaptateur dans le port de recharge Lucid.


 *Note* : Assurez-vous que l'adaptateur et le câble de chargement CCS1 sont bien branchés et que l'adaptateur est branché sur le port de recharge Lucid.


Attendez que le voyant du port de recharge du véhicule indique qu'il a accepté le chargeur.

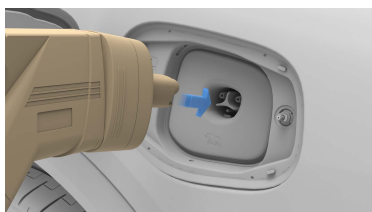


 *Note* : Le butoir d'insertion de l'adaptateur empêchera l'adaptateur d'être inséré trop loin et endommagera le port de recharge du véhicule.


## Retrait de l'adaptateur

 Note : Ne retirez l'adaptateur du port de recharge qu'une fois la recharge terminée.


 Note : Assurez-vous que votre véhicule Lucid est **déverrouillé** avant de retirer l'adaptateur.

1. Tenez la poignée du chargeur et l'adaptateur et retirez-les de façon sécuritaire du port de recharge du véhicule Lucid.

 Note : Ne pressez pas le bouton de déverrouillage sur la poignée pendant que vous la retirez du port de recharge.

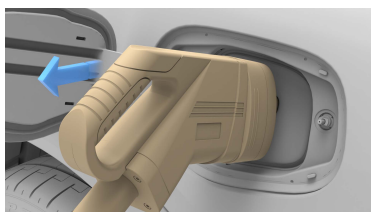

2. Appuyez sur le bouton de déverrouillage de la poignée et retirez l'adaptateur en toute sécurité.

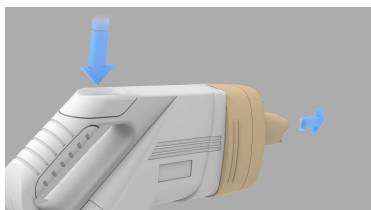

---

# Dépannage

**Si vous constatez que votre voiture ne se recharge pas pendant que vous utilisez l'adaptateur, veuillez suivre les étapes suivantes :**

1. Assurez-vous que l'adaptateur et le câble de chargement CCS1 sont bien branchés et que l'adaptateur est branché sur le port de recharge Lucid.
2. Essayez de débrancher et de réinsérer le câble de recharge et l'adaptateur.
3. Vérifiez l'état de recharge du chargeur CCS1 et du panneau pilote de votre Lucid.
4. Si le problème persiste après avoir essayé les étapes ci-dessus, veuillez communiquer avec le service à la clientèle de Lucid.

## Garantie

Les conditions de garantie limitée des pièces de rechange et des accessoires d'origine de Lucid se trouvent ici : <https://lucidmotors.com/legal#warranty>



---

# Assistance à la clientèle

Vous avez des questions ou des commentaires sur l'adaptateur CCS1 vers NACS de Lucid? Communiquez avec l'assistance à la clientèle Lucid :

Lucid Motors

7373 Gateway Blvd

Newark, CA 94560

ÉTATS-UNIS

**Téléphone** : 1 888 99-LUCID  
(1 888 995-8243)

**Courriel** :  
[customercare@lucidmotors.com](mailto:customercare@lucidmotors.com)

**Site Web** : [www.lucidmotors.com](http://www.lucidmotors.com)

P21-Y23100-00  
Ver. 2025.30.3 - fr-CA

# Lucid CCSI to NACS Adapter Guide North America

Version 2025.30.3 Canadian English

# Table of Contents

Chapters	Sections	
<b>Disclaimers</b>	Legal and Disclaimers	1
<b>Safety Information</b>	Important Safety Information	2
	Warnings	3
<b>Overview</b>	Adapter Overview	4
	Specifications and Compatibility	5
<b>Usage Guide</b>	Charging Time	6
	Connecting the Adapter	7
	Removing the Adapter	8
	Troubleshooting	9
<b>Consumer Information</b>	Warranty	10
	Customer Care	11

---

# Legal and Disclaimers

## Legal

Lucid, Lucid Gravity, Lucid CCS1 to NACS Adapter, and the Lucid Motors wordmarks and logos are trademarks of Lucid Group, Inc.

Specifications are subject to change without notice. Images of the Lucid CCS1 to NACS Adapter are representative; production models may vary.

No portion of these materials may be duplicated, used or disclosed without prior written permission from Lucid Group, Inc.

## Disclaimers

Read this user guide before operating.

This user guide includes the latest information available at the time of publishing. Lucid Group, Inc. reserves the right to make changes to this user guide and/or product without notice.

Changes or modifications to this product not completed by an authorized service provider could void the product warranty.

---

# Important Safety Information

This document contains important instructions and warnings that must be followed when using your Lucid CCS1 to NACS Adapter.

Read and follow all instructions, warnings, dangers, and notifications before using the Lucid CCS1 to NACS Adapter. Failure to follow these guidelines may result in death, injury, or property damage and will void product warranty.

Save these instructions pertaining to a risk of fire or electric shock.

# Warnings

Please note this adapter is designed exclusively for DC charging and is **NOT** compatible with any AC chargers. Attempting to use it with an AC charger can result in a fire, resulting in personal injury and/or property damage.

1. Read this document before using the Lucid CCS1 to NACS Adapter. Failure to follow any of the instructions or warnings in this document can result in fire, electrocution, serious injury or death.
2. Regularly inspect both the adapter and charging/connector ports to identify any accumulated dirt or debris. When dirt or debris enters the connection ports, there is a risk of overheating which can be safeguarded by promptly removing dirt or debris using a compressed air dispenser and electric cleaner. **DO NOT** use the adapter if you observe any damage to the connector ports or pins.
3. This adapter is intended only to be used with Lucid vehicles. Do not use it for any other purpose.
4. Do not use the CCS1 to NACS adapter if it is defective, appears cracked, broken, damaged or fails to operate.
5. Do not open, disassemble, or modify the CCS1 to NACS adapter. Contact Lucid Customer Care for any repairs.
6. Do not disconnect the CCS1 to NACS adapter while the vehicle is charging.
7. Protect the CCS1 to NACS adapter from any water or moisture.
8. Handle with care whenever moving or transporting it. Store in a safe location.
9. Do not touch the CCS1 to NACS adapter's end terminals with sharp metallic objects, such as wire, tools or needles.
10. Do not damage the CCS1 to NACS adapter with sharp objects.
11. Do not insert foreign objects into any part of the CCS1 to NACS adapter.
12. Protect the CCS1 to NACS adapter from moisture, water, and foreign objects at all times. If any exist or appear to have corroded or damaged the adapter, do not use the adapter.
13. Only use in temperatures between -22 °F and 122 °F (-30°C and 50°C).
14. Do not clean with detergent or cleaning solvents.
15. Use of the CCS1 to NACS adapter may affect or impair the operation of medical or implantable electronic devices, such as an implantable cardiac pacemaker or an implantable cardioverter defibrillator. Before using the adapter, check with the electronic device manufacturer concerning the effects that charging may have on any such electronic device.
16. Ensure the charge cable and the CCS1 to NACS adapter do not obstruct pedestrians or other vehicles or objects.
17. To prevent damage to the CCS1 to NACS adapter, handle with care when using or transporting it. Do not subject it to strong force or impact and do not drag or step on it.

For all other questions or concerns about your Lucid CCS1 to NACS Adapter, please contact Lucid Customer Care.


---

# Adapter Overview

## Lucid CCS1 to NACS Adapter



### Parts of the Lucid CCS1 to NACS Adapter

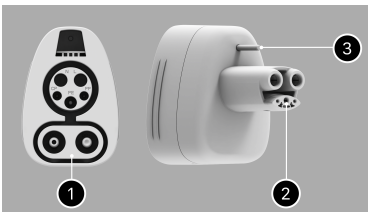


1. CCS1 Charge Port (Female)
2. NACS Charge Connector (Male)
3. Insert Stopper

# Specifications and Compatibility

## Specifications Reference

<b>Rated Voltage</b>	1000V DC
<b>Rated Current</b>	Up to 500 Amps
<b>Operating Temperature</b>	-22°F to +122°F (-30°C to +50°C)
<b>Storage Temperature</b>	-40°F to +185°F (-40°C to +85°C)
<b>IP Rating</b>	IP67 Unmated, IP54 Mated
<b>EV Connector</b>	CCS1 to NACS

-  **WARNING:** Do not store the CCS1 to NACS adapter outside of the storage temperature range.

## Adapter Compatibility

The Lucid CCS1 to NACS Adapter is compatible with the following Lucid vehicles:

- Lucid Gravity

---

# Charging Time


Charging time may vary according to charging station power, ambient temperature, and battery temperature.

If the surface temperature of the adapter reaches 140°F (60°C), the charging will shut off.


## Connecting the Adapter

1. Open the charge port door on your Lucid vehicle.
2. Insert the CCS1 charging cable into the CCS1 port on the adapter and press firmly until you hear a click.
4. Begin charging according to the charging station's guidelines.


Check the charge port status lights or the Pilot Panel to ensure your Lucid vehicle is charging.

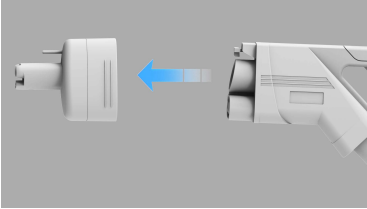


3. Insert the adapter into the Lucid charge port.

 **NOTE:** Make sure that the adapter and CCS1 charging cable are firmly connected and that the adapter is plugged into the Lucid charge port.

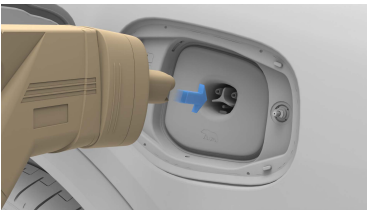

Wait for the vehicle's charge port light to signal that it has accepted the charger.




 **NOTE:** The insert stopper on the adapter will keep it from being inserted too far and damaging the vehicle's charge port.


---

# Removing the Adapter


-  **NOTE:** Only remove the adapter from the charge port once charging is completed.
-  **NOTE:** Ensure your Lucid vehicle is **unlocked** prior to removing the adapter.

1. Hold both the charger handle and the adapter and securely pull them out of the Lucid vehicle's charge port.

-  **NOTE:** Do not press the unlock button on the handle while pulling it out of the charge port.

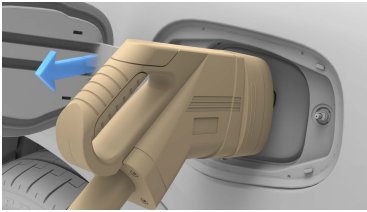

2. Press the unlock button on the handle and safely remove the adapter.

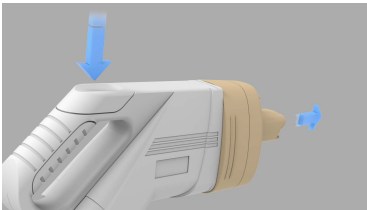

---

# Troubleshooting

**If you find that your car isn't charging while using the adapter, please follow these steps:**

1. Check to make sure the adapter and the CCS1 charging cable are firmly connected and that the adapter is plugged into the Lucid charge port.
2. Try unplugging and re-inserting both the charging cable and the adapter.
3. Check the charging status on both the CCS1 charger and your Lucid vehicle's Pilot Panel.
4. If the problem persists after attempting the above steps, please contact Lucid Customer Care.

---

# Warranty

Lucid's Genuine Spare Parts and Accessories Limited Warranty terms can be found here: <https://lucidmotors.com/legal#warranty>



## Customer Care

Questions or feedback about the Lucid CCS1 to NACS Adapter? Contact Lucid Customer Care:

LUCID MOTORS

7373 Gateway Blvd

Newark, CA 94560

USA

**Phone:** 1-888-99-LUCID  
(1-888-995-8243)

**E-mail:** [customercare@lucidmotors.com](mailto:customercare@lucidmotors.com)

**Website:** [www.lucidmotors.com](http://www.lucidmotors.com)

P21-Y23100-00  
Ver. 2025.30.3 - en-CA